

# Installation Instructions

## Models: TRTE180 / TRSE180 ECTE180 / ECSE180

### 3/8" Frameless Slider & 180° Panel



Scan this Barcode for Parts Bag BP.5004.NTL



Thank you for purchasing this outstanding product!  
This booklet will help you install your units safely and successfully.

IMPORTANT: Warnings and General Shower Door Information  
Page 2



HEAVY



CAUTION

**SAFETY  
WARNINGS:**




SHARP




GLASS FRAGILE

Pick a unit below that best represents your configuration.

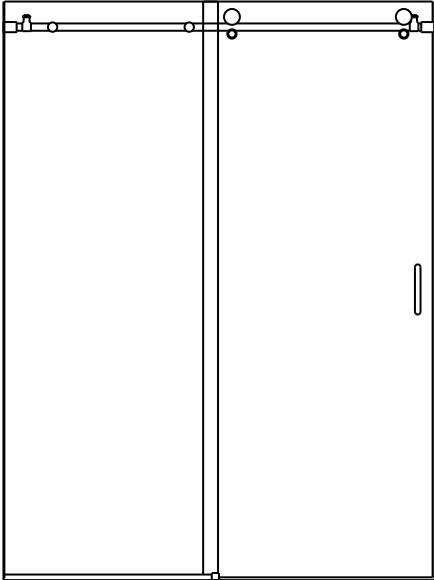

**TRSE180  
ECSE180**  
Shower Slider & 180° Panel

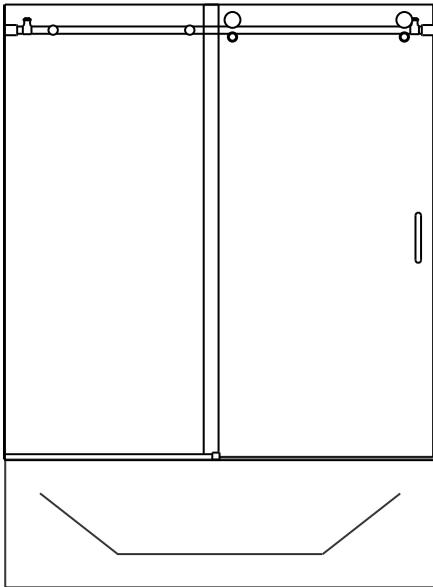

**TRTE180  
ECTE180**  
Tub Slider & 180° Panel

#### General Required Tools

- |  |   |   |
|--|---|---|
| <ul style="list-style-type: none"> <li>* Pencil or water soluble felt pen</li> <li>* Hacksaw with 24 tooth blade</li> <li>* Metal file (smooth sharp edges)</li> <li>* Tape measure</li> <li>* Drill, electric or battery</li> </ul> | <ul style="list-style-type: none"> <li>* #2 Phillips Screw driver</li> <li>* 3/16" drill bit carbide for tile</li> <li>* 5/16" drill bit carbide for tile</li> <li>* Caulking gun</li> <li>* Clear 100% Silicone (recommended)</li> </ul> | <ul style="list-style-type: none"> <li>* 4 ft. Level</li> <li>* Rubber mallet</li> <li>* Razor knife</li> <li>* Blue painters tape</li> </ul> |
|--|---|---|

Booklet: MM.5004



## SAFETY WARNINGS:



### CAUTION - READ THOROUGHLY BEFORE INSTALLATION

**Follow instructions:** Instructions must be read and followed carefully to reduce the risk of serious injury during and after installation. Any deviation from these instructions can create safety hazards.

**Tempered Glass:** Agalite enclosures glass panels are safety tempered to conform to general building codes. The intent of tempering is to reduce the risk of injury. Be careful handling tempered glass. Pay special attention to protect all edges of the glass from contact with hard surfaces.

#### General Notes:

- **Exposed ends of aluminum** and other hard components can be rough, sharp or jagged due to the processes of cutting, drilling, notching, etc. Sharp ends must be deburred, smoothed or rounded by the installer before installation. Failure to do so could result in serious injury to installer and user of the enclosure.
- **Sliding and swinging glass doors** hitting any unprotected bathroom obstruction or metal or glass component of the shower door itself, may indicate improper installation and could lead to glass breakage or serious injury. The installer must correct the deficiencies before allowing the door to be used.
- **Towel Bars, handles and other accessories** are in no way considered to be grab bars or other bracing or fall prevention mechanisms. The intent of these accessories is to facilitate proper operations and esthetics of the unit.

### Shower Door Facts

**Shower Doors are Not Watertight:** Depending on the type of shower door selected, a properly designed and installed shower enclosures will protect areas outside of the enclosure from water damage under normal shower conditions to varying degrees. Excessive water pressure or directing the shower head or hand held sprays directly at doors or joints is not a normal shower conditions and can result a leak. The amount of water that can escape your shower varies by the type of shower as well. Heavy glass units with no or limited vinyl seals will allow water to escape under normal conditions. In general, the more metal and seals in the unit, the more water protection will be achieved.

**Drilling holes in horizontal surfaces:** Drilling holes to anchor horizontal sills and curbs to thresholds and tub decks is discouraged. Using masking tape or double-sided tapes to secure non-load bearing components during installation (permanently secured later with silicone/caulking) is one technique to help minimize potential of water leaking underneath flooring. These instructions do not recommend drilling holes on horizontal surfaces for this reason.

#### Metal Colors:

- **Anodized Aluminum:** The color of anodized Silver, Brushed Nickel, Satin Silver, Dark Bronze, and Gold anodized aluminum will vary between adjacent components because of variabilities within polishing, anodizing process and alloy composition. We make every effort to limit the variation; but, it is allowable and must be accepted.
- **Electro Plated Brass and Stainless Steel:** The color of Silver, Brushed Nickel, Satin Silver, Oil Rubbed Bronze, Dark Bronze, and Gold electro plated components will also vary. This is allowable. Most of these finishes are also "living finishes", meaning, they may change, wear, weather, show patina, oxidize, etc. over the life of the product. This is allowable.
- **Powder Coat:** This is a painting process and therefore can achieve the best color matching. Power coat paint, however, is less durable at joints of moving components and at edges that have been cut after the powder coat has cured. Some flaking or chipping in these areas are allowable.
- **All Metal:** Any metal component (and glass components as well) will have limited scratches and pits. We make every effort to limit them; but, they are allowable and must be accepted.


**Cleaning and Care:** refer to your owners manual for cleaning and care instructions.

# Installation Instructions

## Models: TRTE180 / TRSE180 ECTE180 / ECSE180

### 3/8" Frameless Slider & 180° Panel

Figure 1 - Exploded View

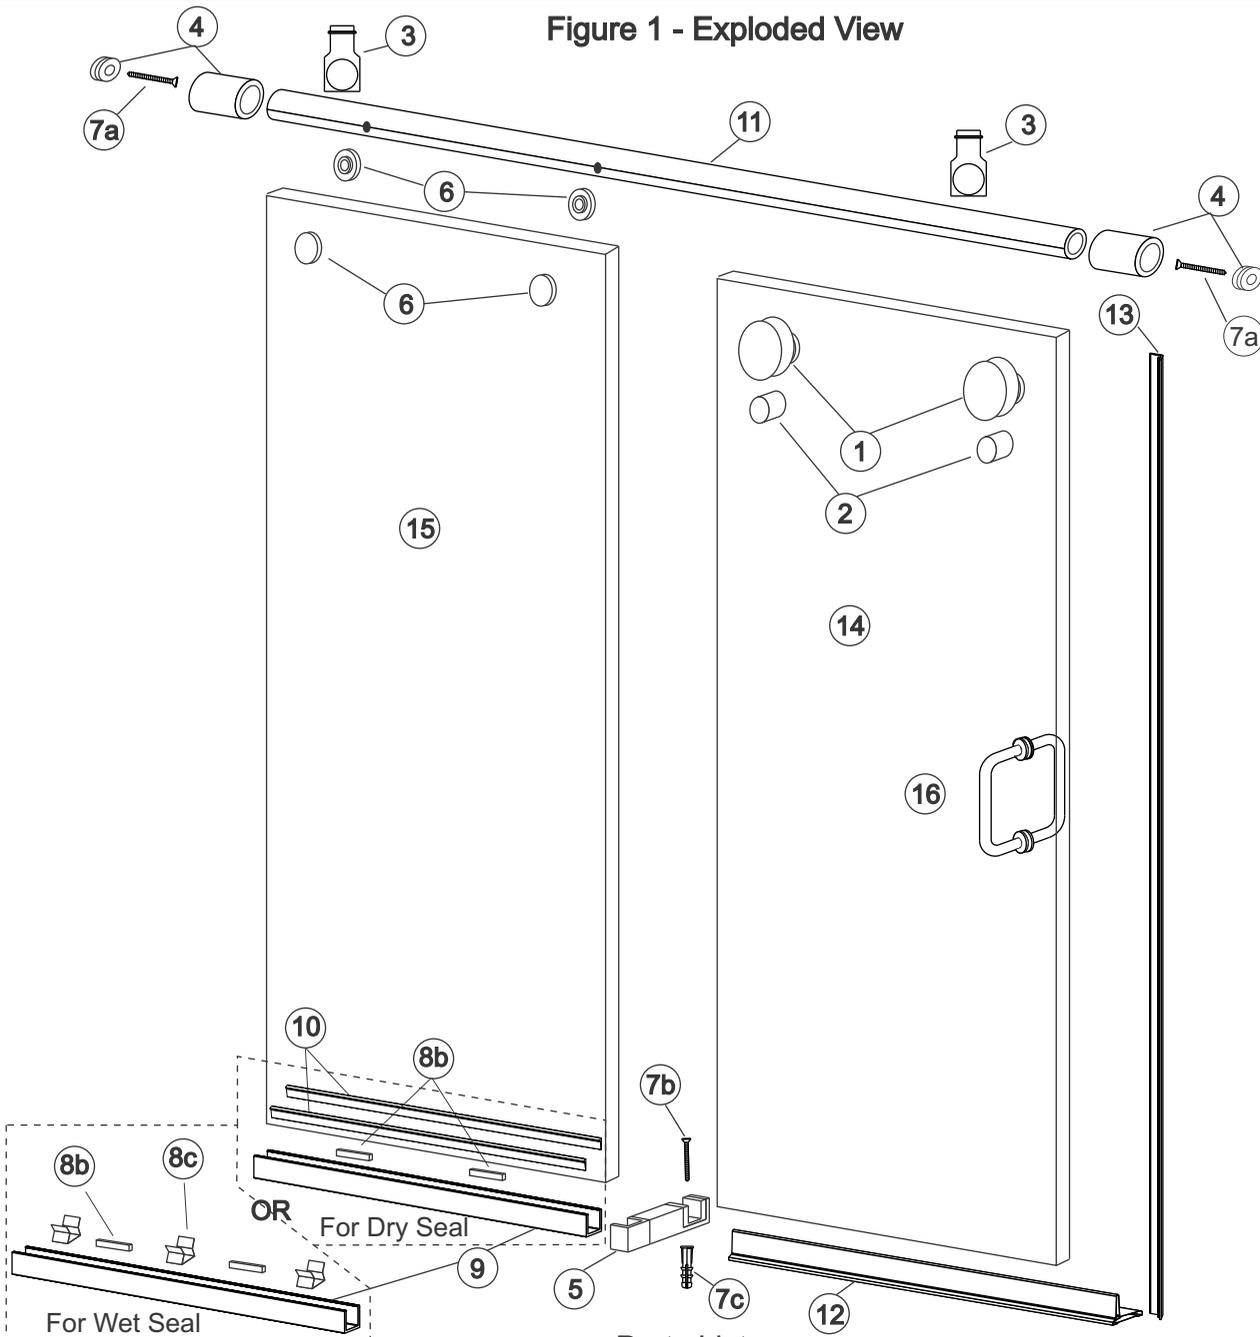



**Parts List**

HA.3101 Part Box	
1. HA.3001 - Roller Wheels -----	2
2. HA.3002 - Anti Jump Knobs -----	2
3. HA.3003 - Bumper Stops -----	2
4. HA.3004 - Wall Collars / Pucks ----	2
5. HA.3005 - Center Guide -----	1
6. HA.3007 - Panel Connectors -----	2
7. BP.5001 - Part Bag -----	1
7a - M6 - 1.75 X 60mm Screw -----	2
7b - #10 X 1-1/8" 16tpi Screw -----	1
7c - #10 X 1- 3/8" Wall Anchors ----	1
7d - 6mm Allen Wrench -----	1
7e - 4mm Allen Wrench -----	1
7f - 3mm Allen Wrench -----	2

BP.5004.NTL - Part Bag	
8a - BP.3027.SIL (Parts Kit) -----	1 Bag
8b - BP.3028.NTL Setting Blocks-----	1 Bag
8c - SP.2221.CLR Centering Clips ----	3
8d - MM.5004 Inst. sheet -----	1

Other Major Components	
9. EX.1018 - Panel Sill -----	1
10. VN.4031 - Snap Vinyl -----	2
11. HA.30XX - Header Tube -----	1
12. VN.4304 - Soft Sill -----	1
13. VN.4083 - Vertical edge seal -----	1
14. Sliding Panel -----	1
15. Fixed Panel -----	1
16. HA.2701 - Handle -----	1

Full Size Drawings:



*Extra screws may be provided for your convenience*

# Installation Instructions

## Models: TRTE180 / TRSE180 ECTE180 / ECSE180

### 3/8" Frameless Slider & 180° Panel


**STEP 1 - Calculation:**

- \* Measure height of sliding glass panels (14): \_\_\_\_\_
- \* Subtract 3 1/16" from this measurement: \_\_\_\_\_
- \* New measurement is the height from the threshold to the center of the first Wall Puck Step 3.

Slider panel height - 3 1/16 = \_\_\_\_\_

**STEP 2 - Evaluate Threshold:**

- \* Maximum recommended vertical threshold outage from side to side is 1/4".
- \* If needed, mark high-side and low-side of threshold.
- \* First puck will be installed on high-side wall, or stationary panel side if threshold is level.
- \* **NOTE:** Set sliding panel (14) inside shower before proceeding.

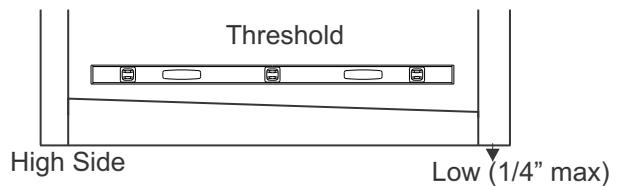

**STEP 3 - Determine Centerline on Threshold and Walls:**

- \* Mark Center Guide (5) location on threshold.
- \* To determine Centerline location, center the guide at center of threshold width and depth.

Do not installed! Location will shift during final adjustments.

- \* Wall pucks will be centered on the centerline of unit.
- \* Laser or plumb-bob is handy to determine and mark the overall centerline of the unit. See Detail A





**STEP 4 - Mount First Wall Puck on "High Side" wall:**

- \* Measure up from the threshold, the distance determined in Step 1. Center Puck on the Centerline with the slot in the vertical position and mark the hole location. See Detail B.
- \* Drill with a 3/16" drill bit. Enlarge hole through tile with 5/16" carbide bit to ensure screw will not crack tile.
- \* Install the Wall Puck (4 inside) with one M6 X 50mm screw, (7a).
- \* Attach Wall Collar onto puck and tighten set screws to secure Wall Collar, (4) in place.
- \* Sequence tightening of set screws as shown for best results.

**STEP 5 - Check Header Tube Length:**

- \* Note: Your Header Tube may already be cut to size.
  - To check, measure wall to wall just below the Wall Collar and subtract 1-1/2".
  - If your header is this dimension go to STEP 6.

- \* If header is not cut to length See Detail C.
  - Measure the uncut header length.
  - Subtract dimension calculated above (Wall-to-Wall - 1 1/2")
  - Take the difference and divide by 2.
  - This is the amount of Tube that must be cut off of EACH END of the uncut tube at the finished length of the Header Tube, (11).

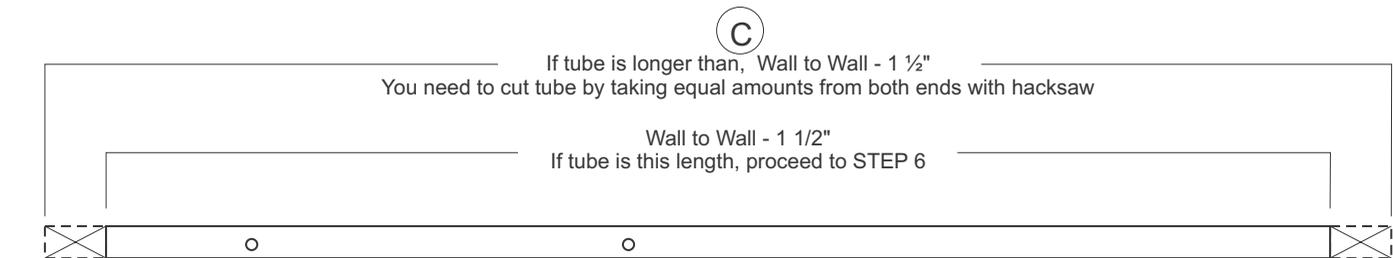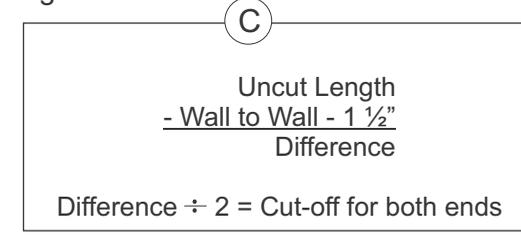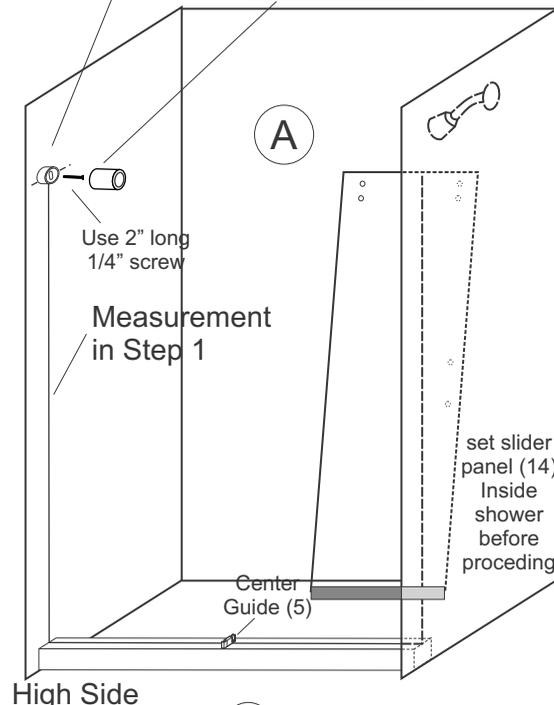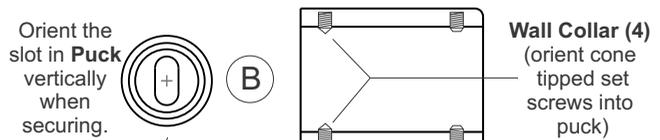

# Installation Instructions


Models: TRTE180 / TRSE180

ECTE180 / ECSE180


3/8" Frameless Slider & 180° Panel

## STEP 6 - Install Panel Connectors on Header Tube:

- \* Orient Header Tube (11) so that the two holes are facing up.
- \* Insert a screwdriver into the center hole of the tube.
- \* Slide a Plug into tube stopping it with the screwdriver.
- \* Manipulate the plug so that the hole in the plug lines up with the hole in the tube.
- \* Put the screw through connector plate and into plug.
- \* Snug screws with the supplied Allen wrench.
- \* Repeat this procedure with the second hole closest to the end of the tube. See Detail D.

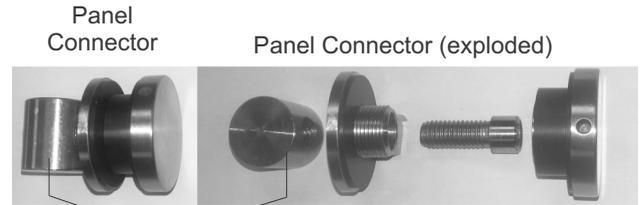


Plug goes inside header tube.  
Align threaded plug holes with holes in header

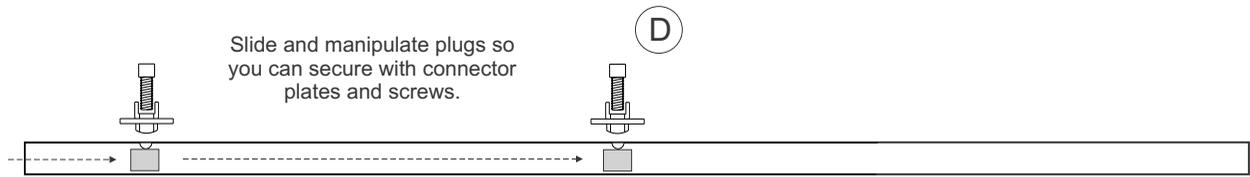


Slide and manipulate plugs so you can secure with connector plates and screws.

## STEP 7 - Install Stoppers and Wall Collar on Header Tube:


- \* Carefully slide stopper to initial locations about 3" onto the tube.
- \* Take care not to scratch the tube.
- \* Lightly tighten stopper set screw or secure with painter's tape so stoppers do not slide and scratch the tube.
- \* Final position will be determined during later steps.
- \* Opposite Side Wall Collar:
  - Slide other wall collar onto the opposite side of tube.See Detail E.

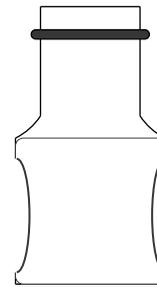

Stopper

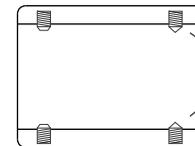

Wall Collar  
(orient cone tipped set screws into puck)

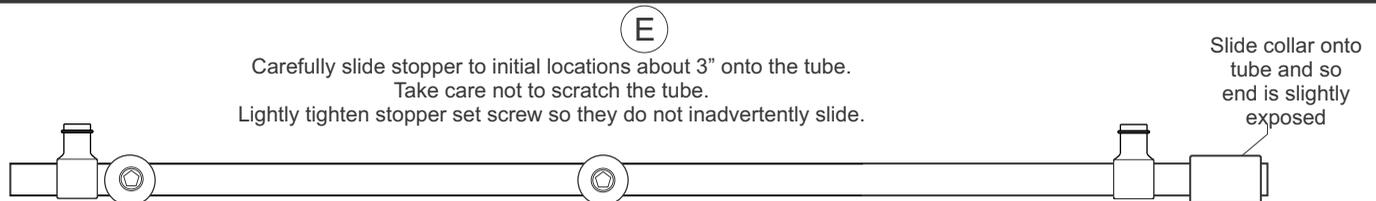

Carefully slide stopper to initial locations about 3" onto the tube.  
Take care not to scratch the tube.  
Lightly tighten stopper set screw so they do not inadvertently slide.


Slide collar onto tube and so end is slightly exposed

## STEP 8 - Mount Second Puck on Opposite Wall:


- \* THIS STEP REQUIRES ASSISTANCE
  - Carefully lift wall tube assembly and insert the open tube end into the puck already mounted on the wall (high side).
  - Take the second puck and hold it butted to the loose to end of the header tube and against wall on the centerline.
  - Level the tube with a level and mark the outline of the puck.
  - Remove tube assembly and mark puck slot on the centerline (keep slot vertical)
- \* Drill your mark with a 3/16" bit.
- \* Enlarge hole through tile with 5/16" carbide bit (to ensure screw will not crack tile).
- \* Secure the Wall Puck (4) with one M6 X 50mm screw, (7a).

Already Secured to wall (High Side)

Orient the slot in Puck vertically when securing.



Position until level and centered

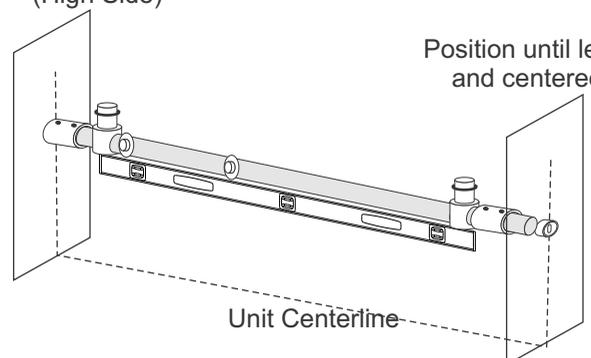

Unit Centerline



# Installation Instructions

## Models: TRTE180 / TRSE180 ECTE180 / ECSE180

### 3/8" Frameless Slider & 180° Panel

#### STEP 9 - Mount Header Tube:

- \* Slide the Header Tube into wall collar with stoppers pointed up.
- \* Slide the loose Wall Collar off the Header Tube and onto the opposite Wall Puck taking care the tube does not fall.
- \* Center the Header tube within both Wall Collars and align the Panel Fixers so they are facing to the outside.
- \* Secure tube by tightening the set screws on each collar in the order shown (for best results).

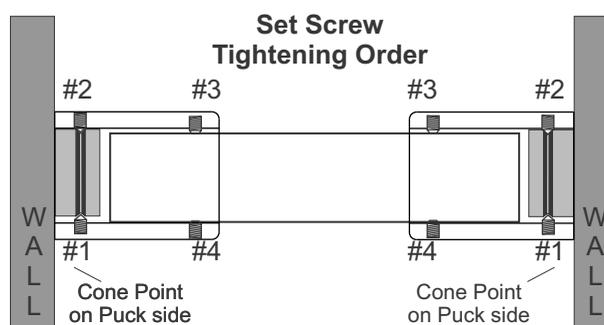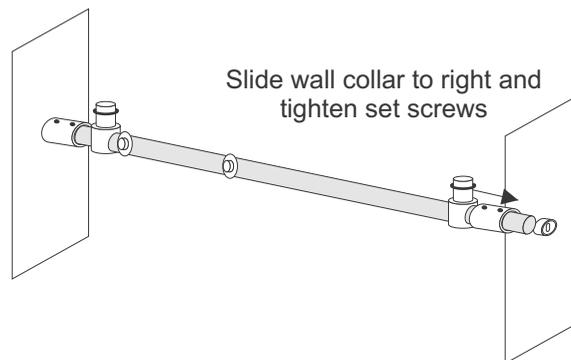

#### STEP 10 - Preparing and Positioning Bottom Channel:

- \* Prepare Bottom Channel (9):
  - The Bottom Channel (9), may already be cut to size.
  - To check, measure the width of the 180° Fixed Glass Panel (15) then subtract 3/4".
  - If needed, cut sill to this dimension measuring from the long point of the miter.
  - Insert two 1/8" Clear Setting Blocks (9b) and add 3 - Centering Clips if you used them in the adjoining panel sill.

\* **NOTE:** Choose the Bottom Channel glazing method:

- DRY SEAL: Will use two pieces of Snap Vinyl after Glass Panel is in final position.

OR

- WET SEAL: In addition to the Setting Blocks, also insert three Centering Clips (8c) into the sill between setting blocks. You will have to silicone glaze both sides of the panel to the Bottom Channel after Panel is in final position.



#### \* Position Bottom Channel:

- Butt bottom channel to wall approximate 1" in front of the marked Centerline (measured to center of channel).
- Securely tape into position with blue painter's tape on the inside and outside to ensure it channel does not slip when you put the panel in.
- NOTE: You will have to adjust the position of the channel forwards or backwards during installation.



Cut the EX.1018 Panel Sill  
Fixed Panel Width - 3/4"

Choose Glazing Method

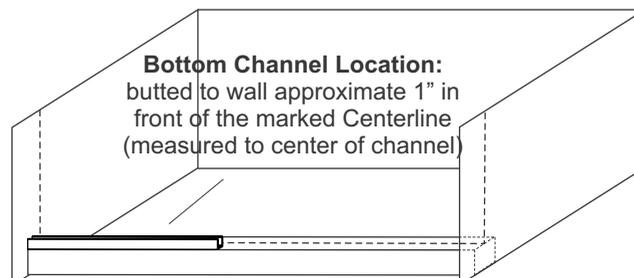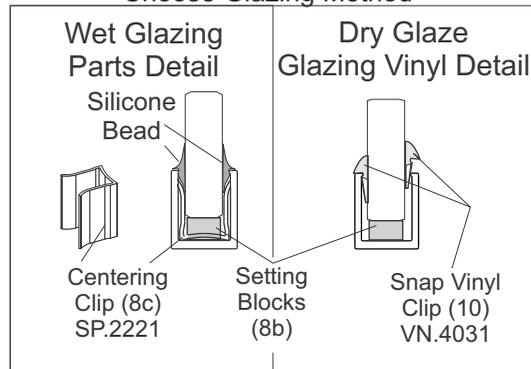


# Installation Instructions

## Models: TRTE180 / TRSE180 ECTE180 / ECSE180

### 3/8" Frameless Slider & 180° Panel

#### STEP 11 - Mounting the Fixed Glass Panel:

- \* Set the Fixed Panel into the Panel Sill:
  - Spaced panel 1/8" off of the wall.
  - **NOTE:** 1/8" gap will be filled with silicone during final steps of installation.
- The Fixed Panel will protrude out of the end of the channel.
- \* Holes in the glass should line up with the two Panel Connectors on the Header Tube.
- \* If they don't, you may have to raise or lower the Panel by adjusting the Setting Blocks
- \* And / Or, adjust puck slot on the wall to raise or lower Tube to adjust up and down and possibly rotate the Header Tube to square it up to the panel.
- \* After the panel is adjusted, secure the Panel to the Header Tube with Panel Connector Cap. Tighten securely using Allen wrenches supplied.
- \* With the top of the Panel secured:
  - Loosen blue tape
  - Use a rubber mallet and tap the Panel Sill and the panel at the bottom to the plumb position using a level.
- \* Securely tape bottom channel to floor with painter's tape.

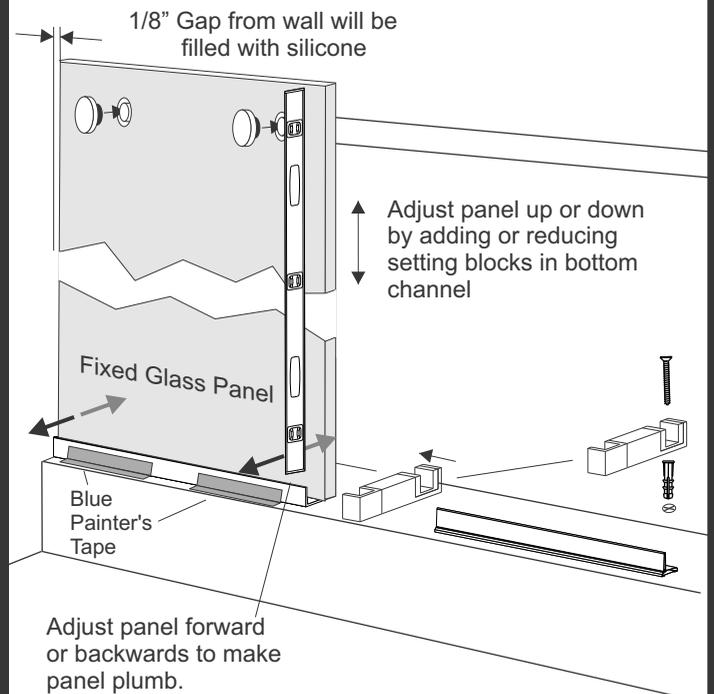


#### STEP 12 - Center Guide:

- \* Set the Center Guide (5) in place on the threshold and over the edge of the Fixed Panel.
- \* **NOTE:** The Center Guide is reversible by loosening the set screw and rotating the receiver.
  - Open "C" without black insert cups over the exposed edge of panel.
  - Black insert side should point up and be positioned to the inside of units as shown.
- \* Mark the hole location and drill with a 1/4" Drill bit. Insert Wall Anchor (7c).
- \* Fill Wall Anchor and hole with silicone and put a bead on the bottom of the Guide.
- \* Secure guide with one #10 X 1-1/8 FHPH Screw (7b).

#### STEP 13 - Mounting the Sliding Panels:

- \* Take the Inside Sliding Panel (14), mount 2 Wheel assemblies (1) as shown.
- \* **NOTE:** The Wheel will face to the outside of the shower.
- \* By rotating plate between roller and glass, adjust the roller so you have equal up and down adjustment.
- \* **NOTE:** Once roller is adjusted to desired height, ensure inner plate is not rotated.
- \* Tighten the roller securely as shown by rotating back cap.
- \* Repeat for second roller (1). Tighten the rollers securely using the two 3mm Allen Wrenches (7f).

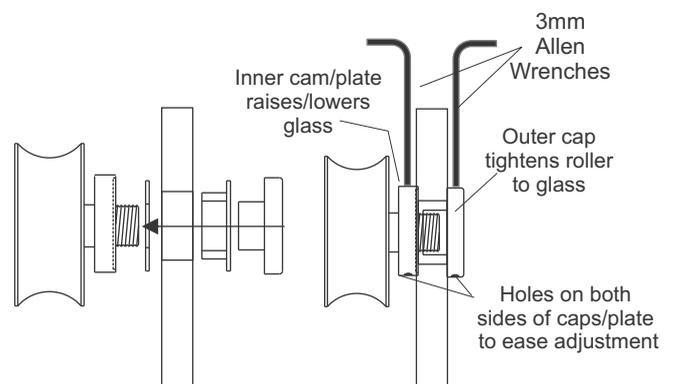

# Installation Instructions


Models: TRTE180 / TRSE180

ECTE180 / ECSE180

3/8" Frameless Slider & 180° Panel

## STEP 14 - Hanging and Adjusting the Sliding Panel:

- \* From inside of the shower, carefully lift Sliding Panel (14) onto the Header Tube (11) and into the Center Guide (5).
- \* Move each Bumper Stop (3) towards the walls.
- \* **Shower Head Wall:** bring the Sliding Panel to the closed position, leaving an even 1/4" gap at the shower head wall.
- \* NOTE: you may have to individually adjust the rollers up or down if wall and the edge of panel does not have equal reveal from top to bottom.
- \* Secure bumper stop by tightening set screw located at the top of the bumper stop. Tighten this well!
- \* **Stationary Panel Wall:** slide the sliding panel (14) to the open position behind stationary panel (15).
- \* Slide the bumper stop to stop the roller:
  - at least 1" from center of handle holes
  - OR
  - so the back edge of sliding panel is 5/8" or more from the wall.
  - WHICHEVER HAPPENS FIRST
- \* Tighten second bumper stop well!

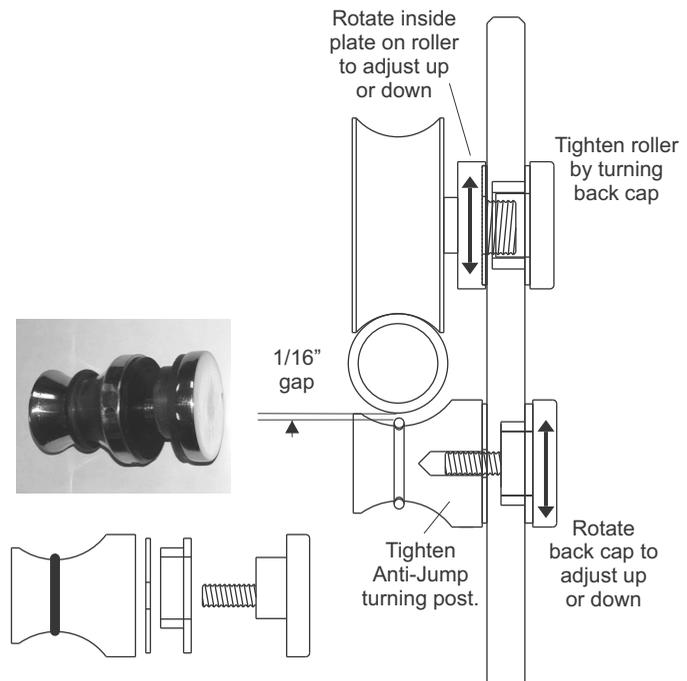

## STEP 15 - Anti Jump Posts (2):

- \* Install Anti Jump Posts as shown.
- \* Adjust posts until they come within 1/16" of the bottom of the bar.
- \* NOTE: Test to make sure the anti-jumps restrict the rollers from coming off the tube.
- \* Tighten Anti-Jump post securely, holding the back cap in adjusted location.

## STEP 16 - Install Handle (16):

- \* Install handle with instructions provided.
- \* Ensure handle does not hit stationary glass panel.

## STEP 17 - Install Bumper Seal (13):

- \* Measure sliding panel top to bottom, deduct 1/8"
- \* Cut bumper seal (13) to this length and tap it onto edge of sliding panel (14) on shower head side.



## STEP 18 - Soft Sill (12):

- \* Measure from center guide to wall and deduct 1/16"
- \* Clean adhesion area under Soft Sill with alcohol and dry.
- \* Cut Soft Sill to dimension. Peel the backing off the tape on the sill and stick in place.



## STEP 17 - Final Glazing/Silicone: GE1200 Recommended

- \* Run a bead of Silicone vertically to seal the panel (15) to the wall. Blue Painters tape is recommended to assist in this step
- \* Install Snap Vinyl (10) or run a bead of Silicone along the horizontal edge of the of bottom channel where it meets the glass panel, and along the entire inside and outside of threshold.
- \* Silicone gaps between center guide and glass.
- \* NOTE: Let silicone dry and tape cure for 24 hours before use.

